



# FIG. 1


CONVENTIONAL ART

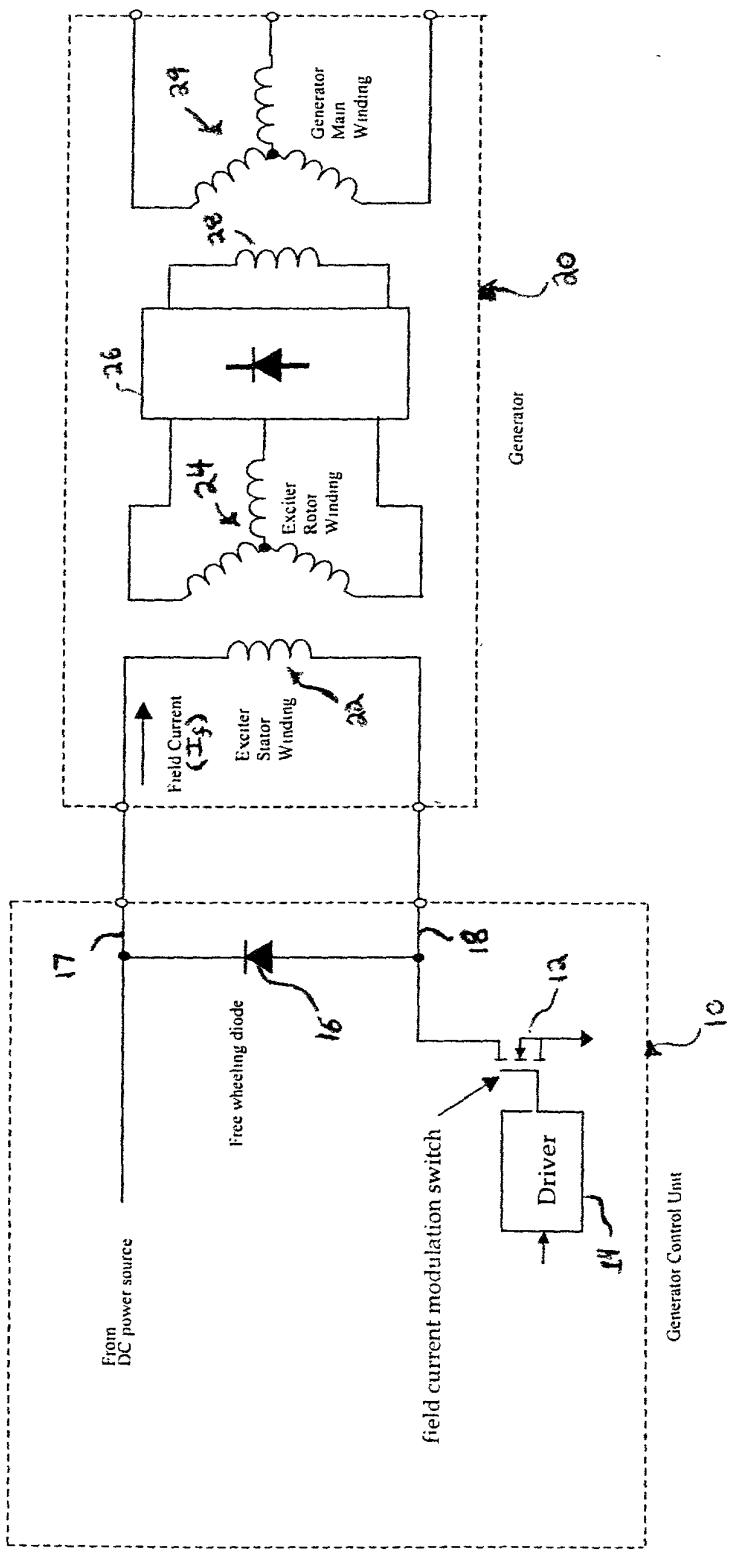

# FIG. 2

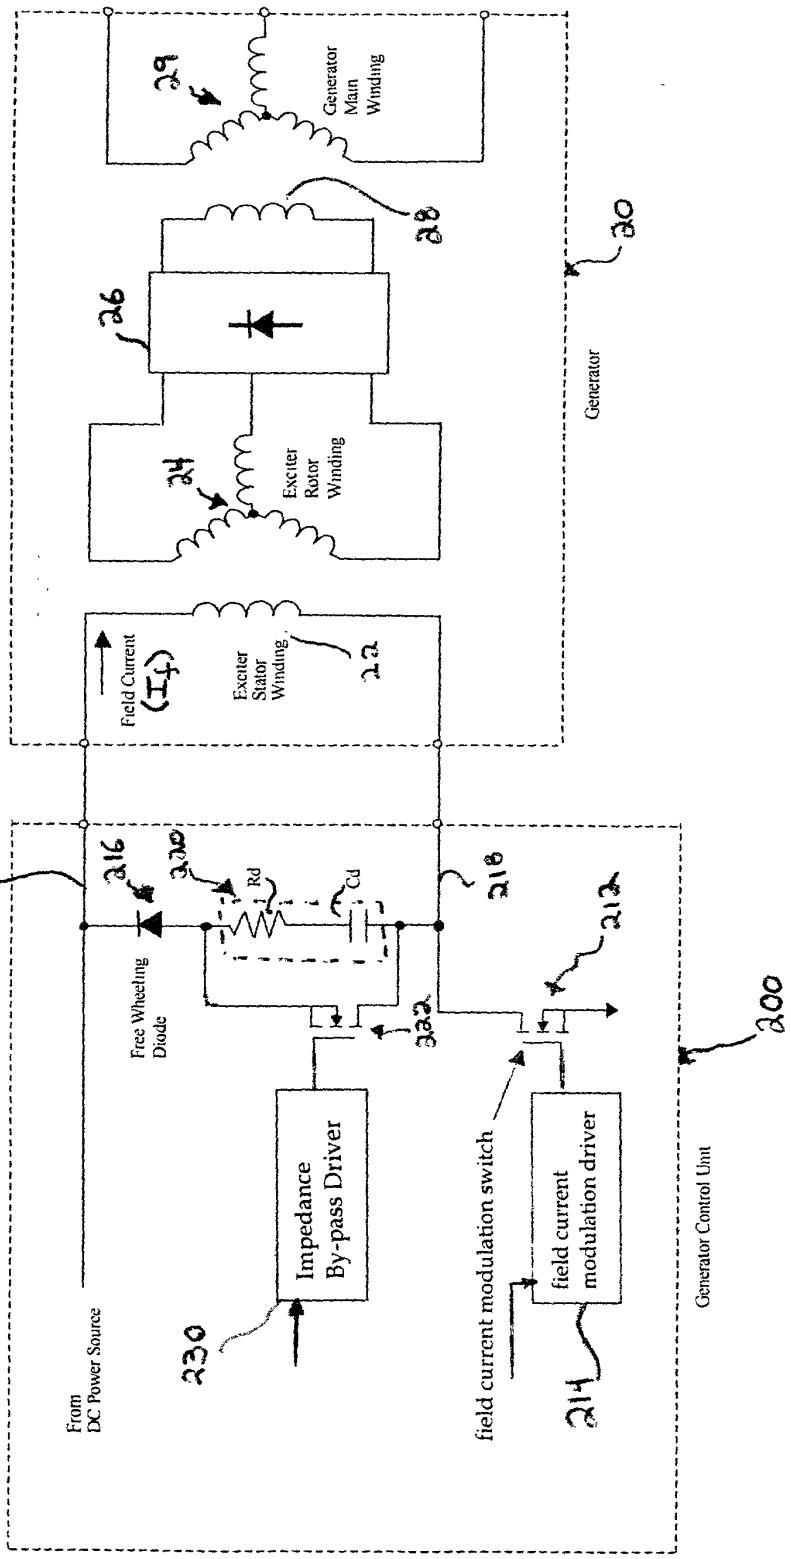

# FIG. 3

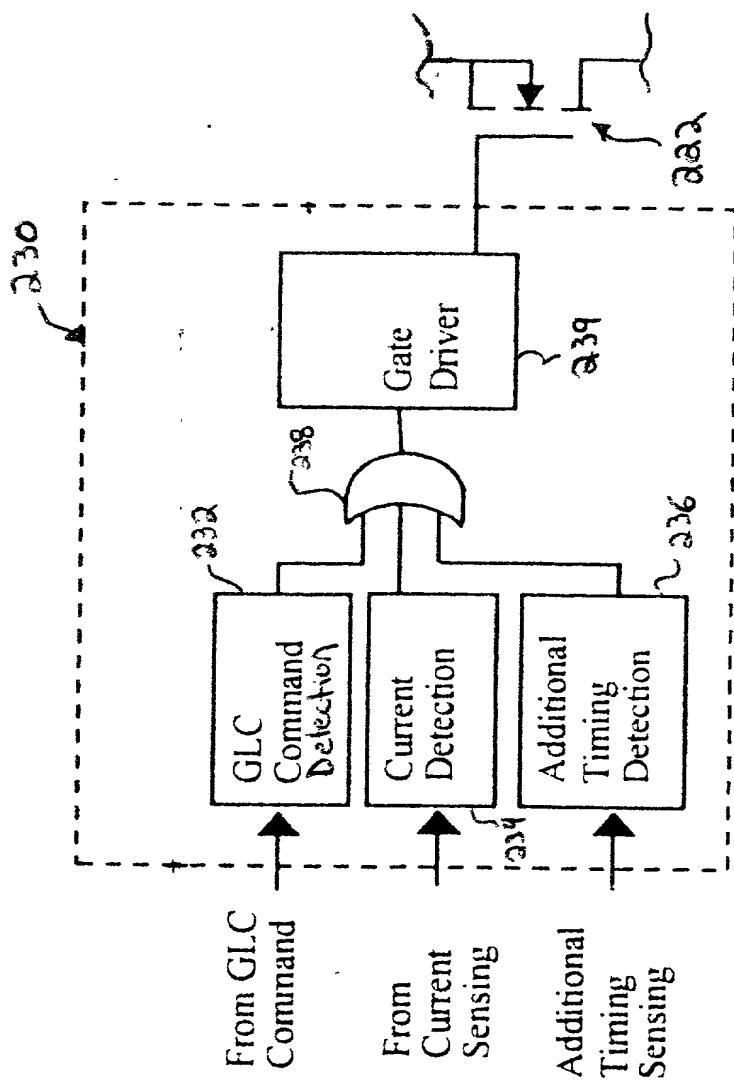

Load-off Transient (without acceleration)

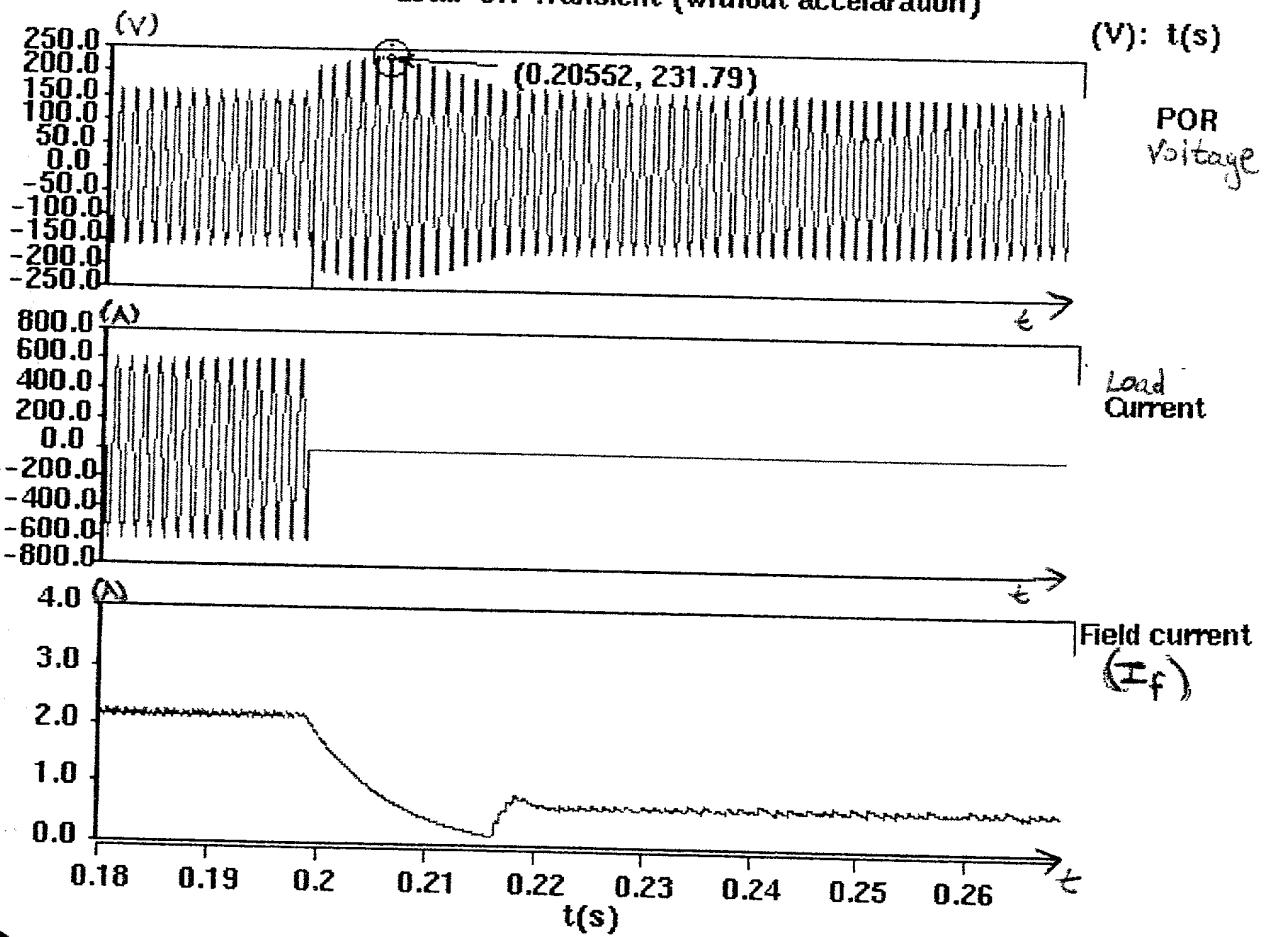


FIG. 4A

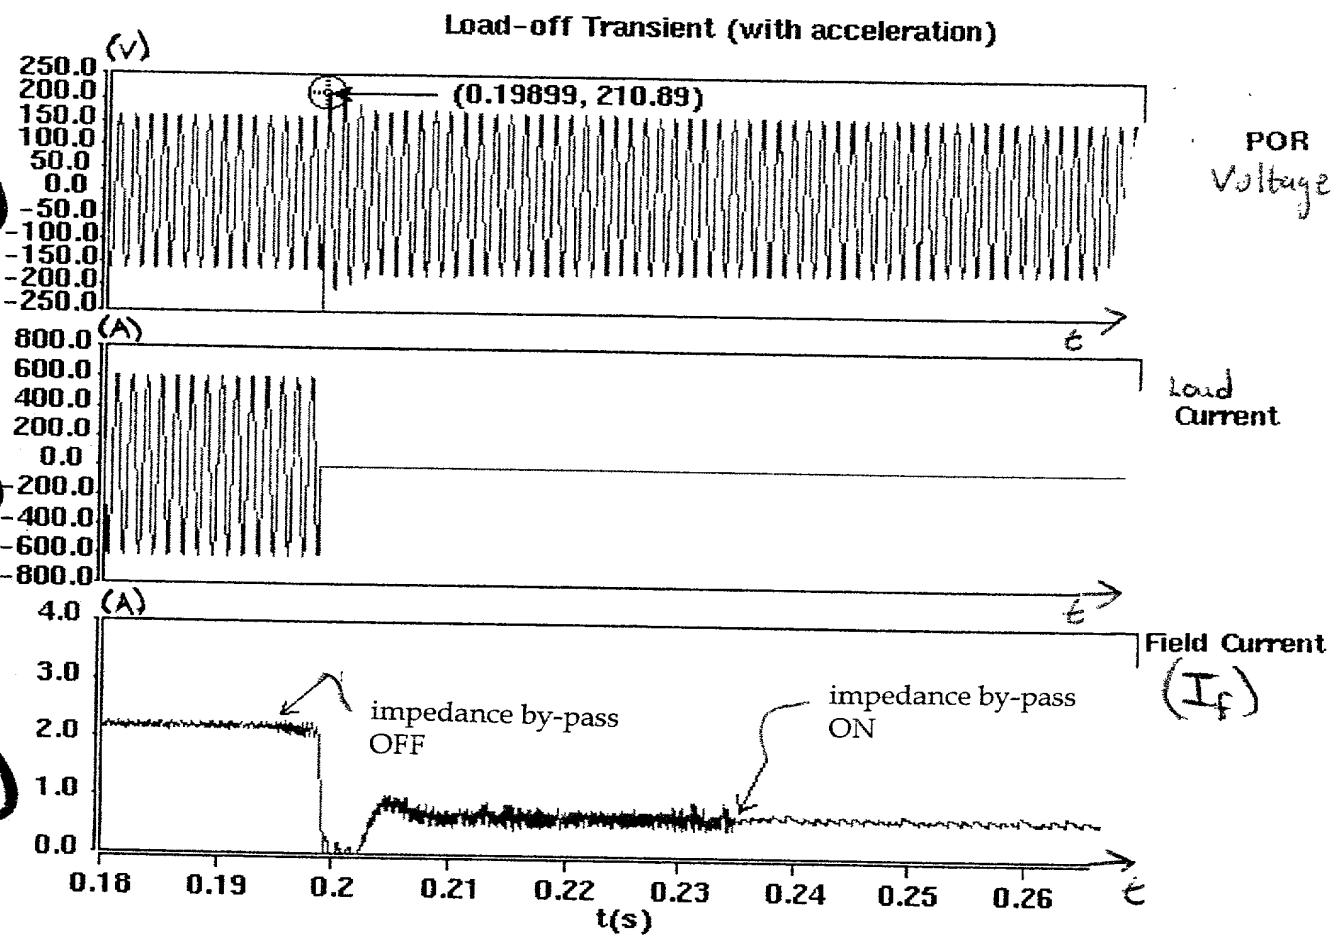


FIG. 4B